



Content

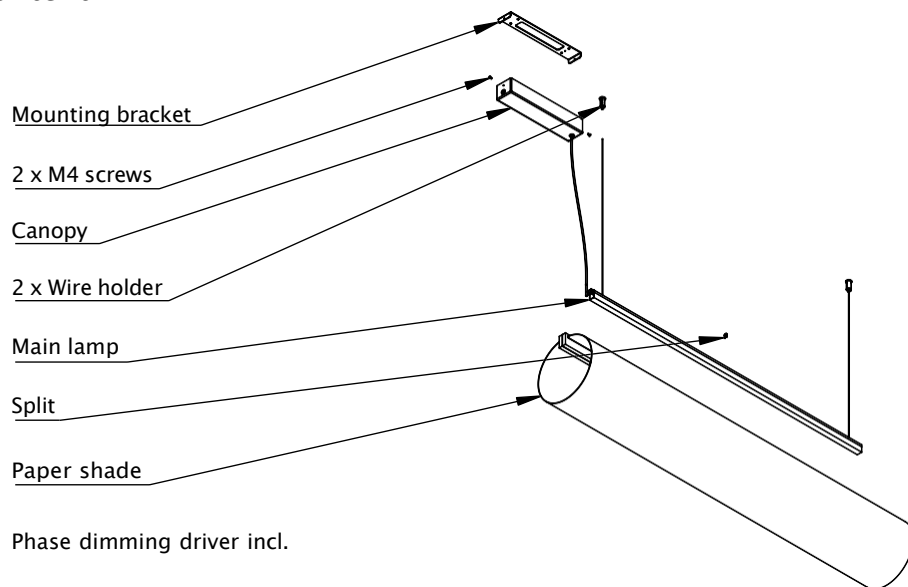


Drilling template

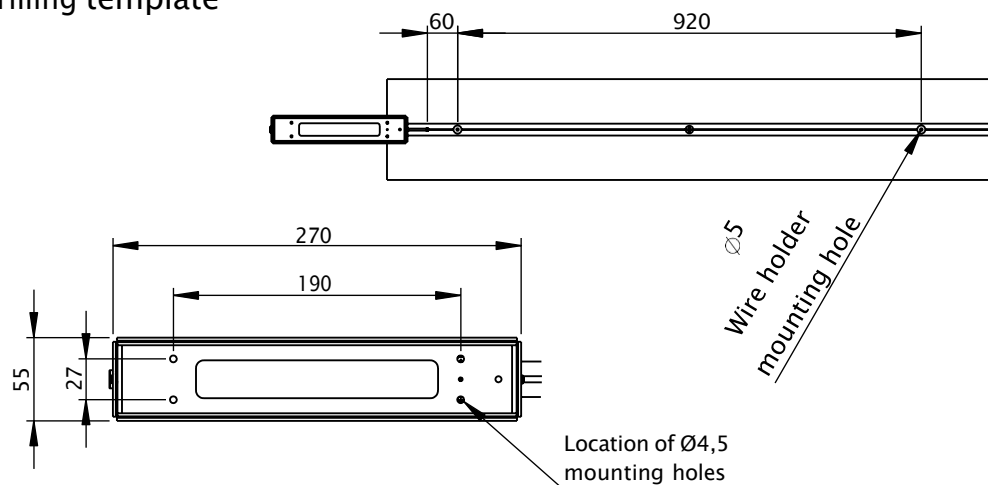

NB!
 If relevant: All drivers must be mechanically fastened.
 If relevant: turn of power before changing lightsource
 If relevant: Loose cords on wall mounted luminaires must be effectively fixed to the wall if exceeding a length of 300mm
 If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Mounting

Step 1
 Fix mounting bracket by using four mounting screws

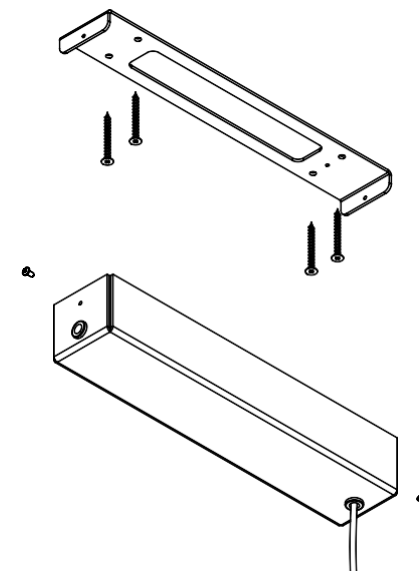

Step 2
 Connect power supply cable to driver


Step 3
 Fasten canopy on bracket by using the two screws



Mounting

Step 4
Fasten top part of wire holder
with one mounting screw


Step 5
Guide wire through bottom part
and screw the bottom part clockwise into
the top part of the wire holder to fasten it

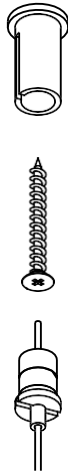

Step 6
Two persons required to attach
paper shade by gathering the
wood parts onto the main lamp

Step 7
Make sure cables and wires are
placed in the slots on the wood parts

Step 8
Adjust the wires to ensure the main lamp
is horizontal and in the desired length.
Cut the excess wire

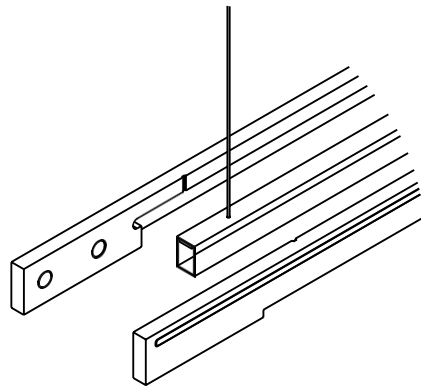

NB!

If relevant: All drivers must be mechanically fastened.

If relevant: turn of power before changing lightsource

If relevant: Loose cords on wall mounted luminaires must be effectively fixed to the wall if exceeding a length of 300mm

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Mounting

Step 9
Use the split to hold shade in place

