




Hardware	Ctn No.	1
----------	---------	---

No.	Size	Qty
A1	590x180x23mm	1
A2	590x180x23mm	1
B1	575x280x23mm	1
B2	575x293x23mm	1
C1	550x274.5x20mm	1


No.	Size	Qty
C2	550x274.5x20mm	1
D	600x180x38mm	1
E	598x110x20mm	2
F	599x180x23mm	1
G	596x130x20mm	3

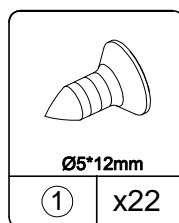


spare:2

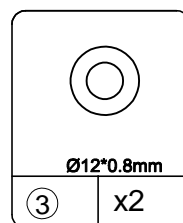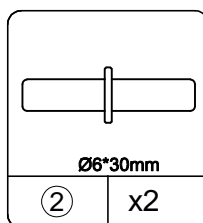


spare:2

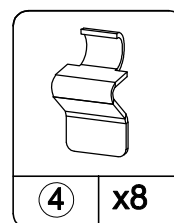


spare:2

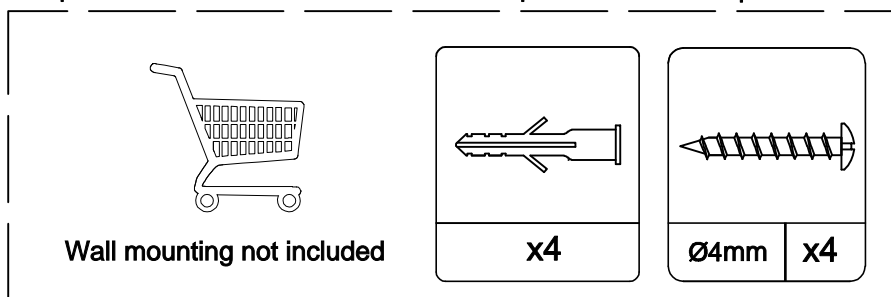



(1) - Attach (E) to (F) as below shown.

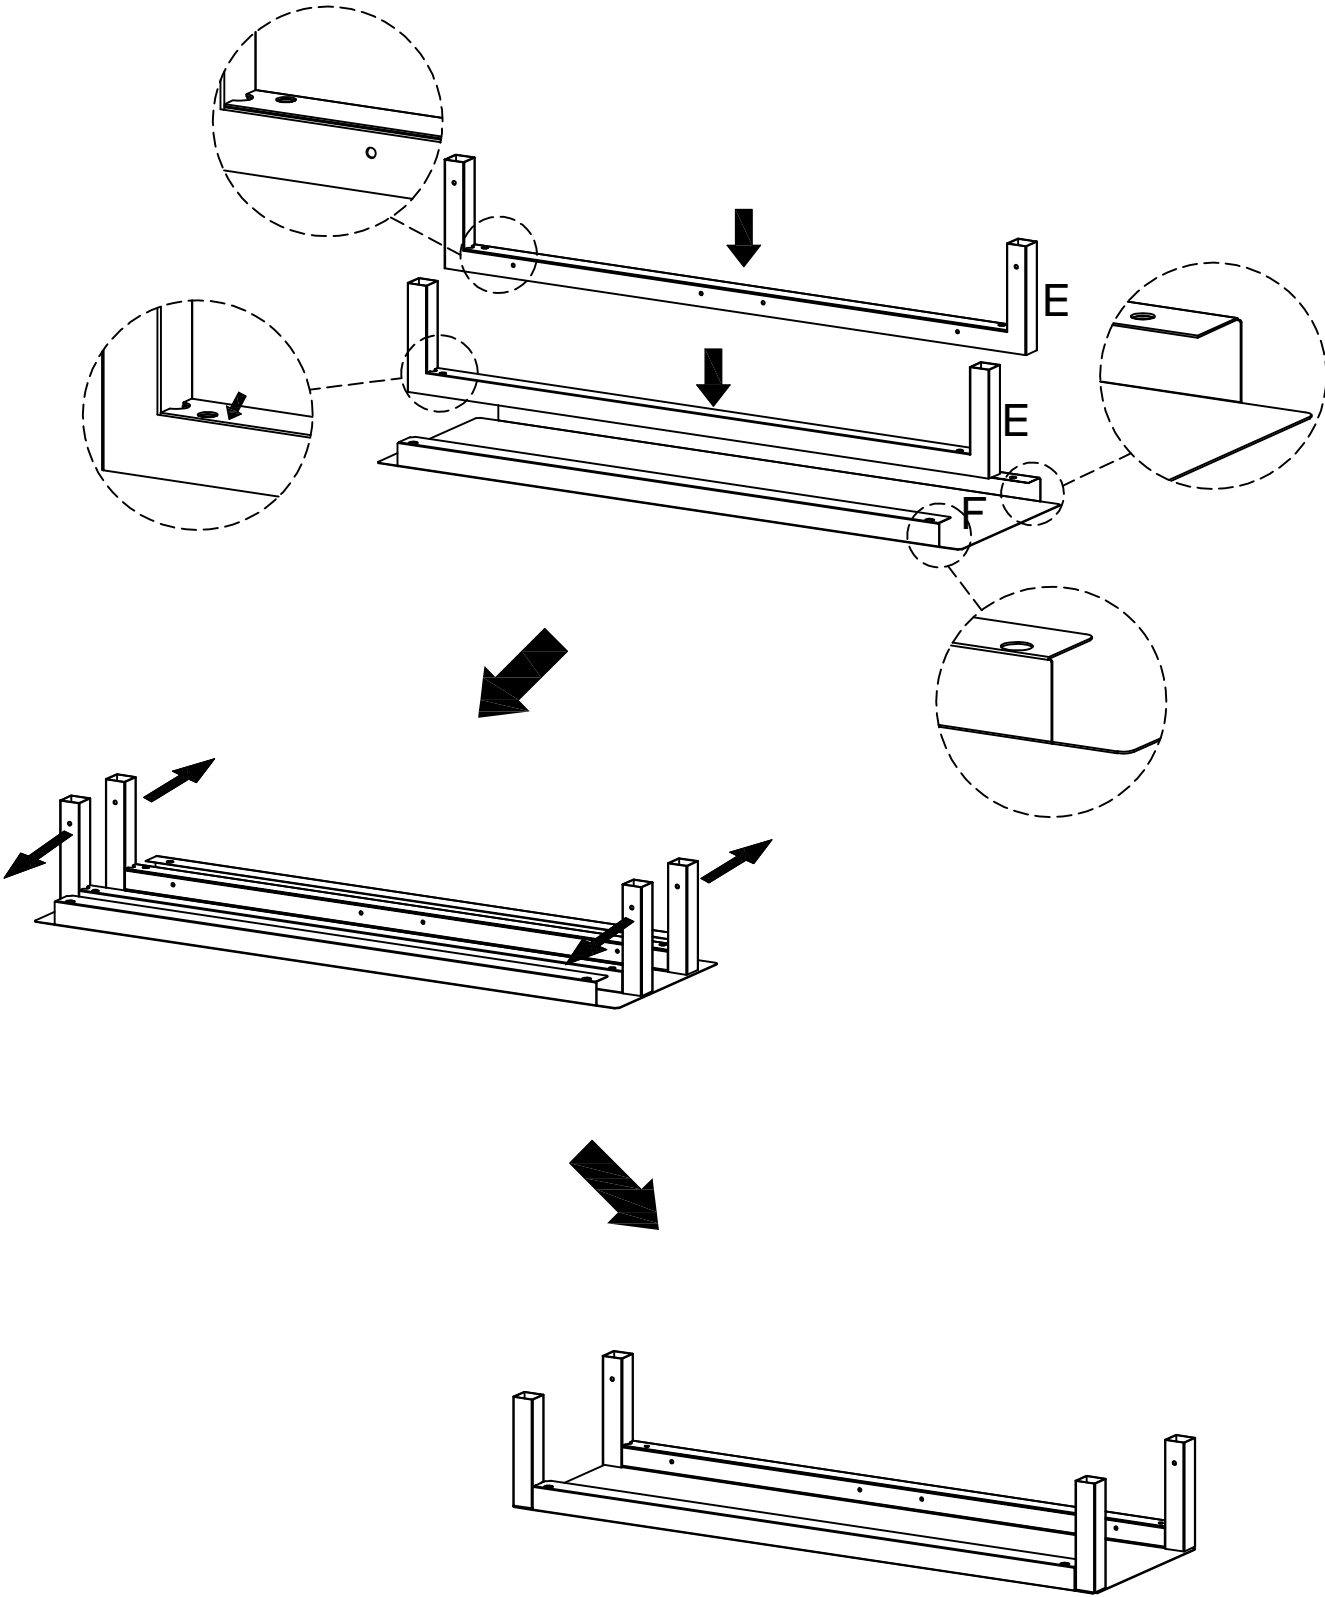


(2) - Attach (A1) & (A2) to (E) as below shown.

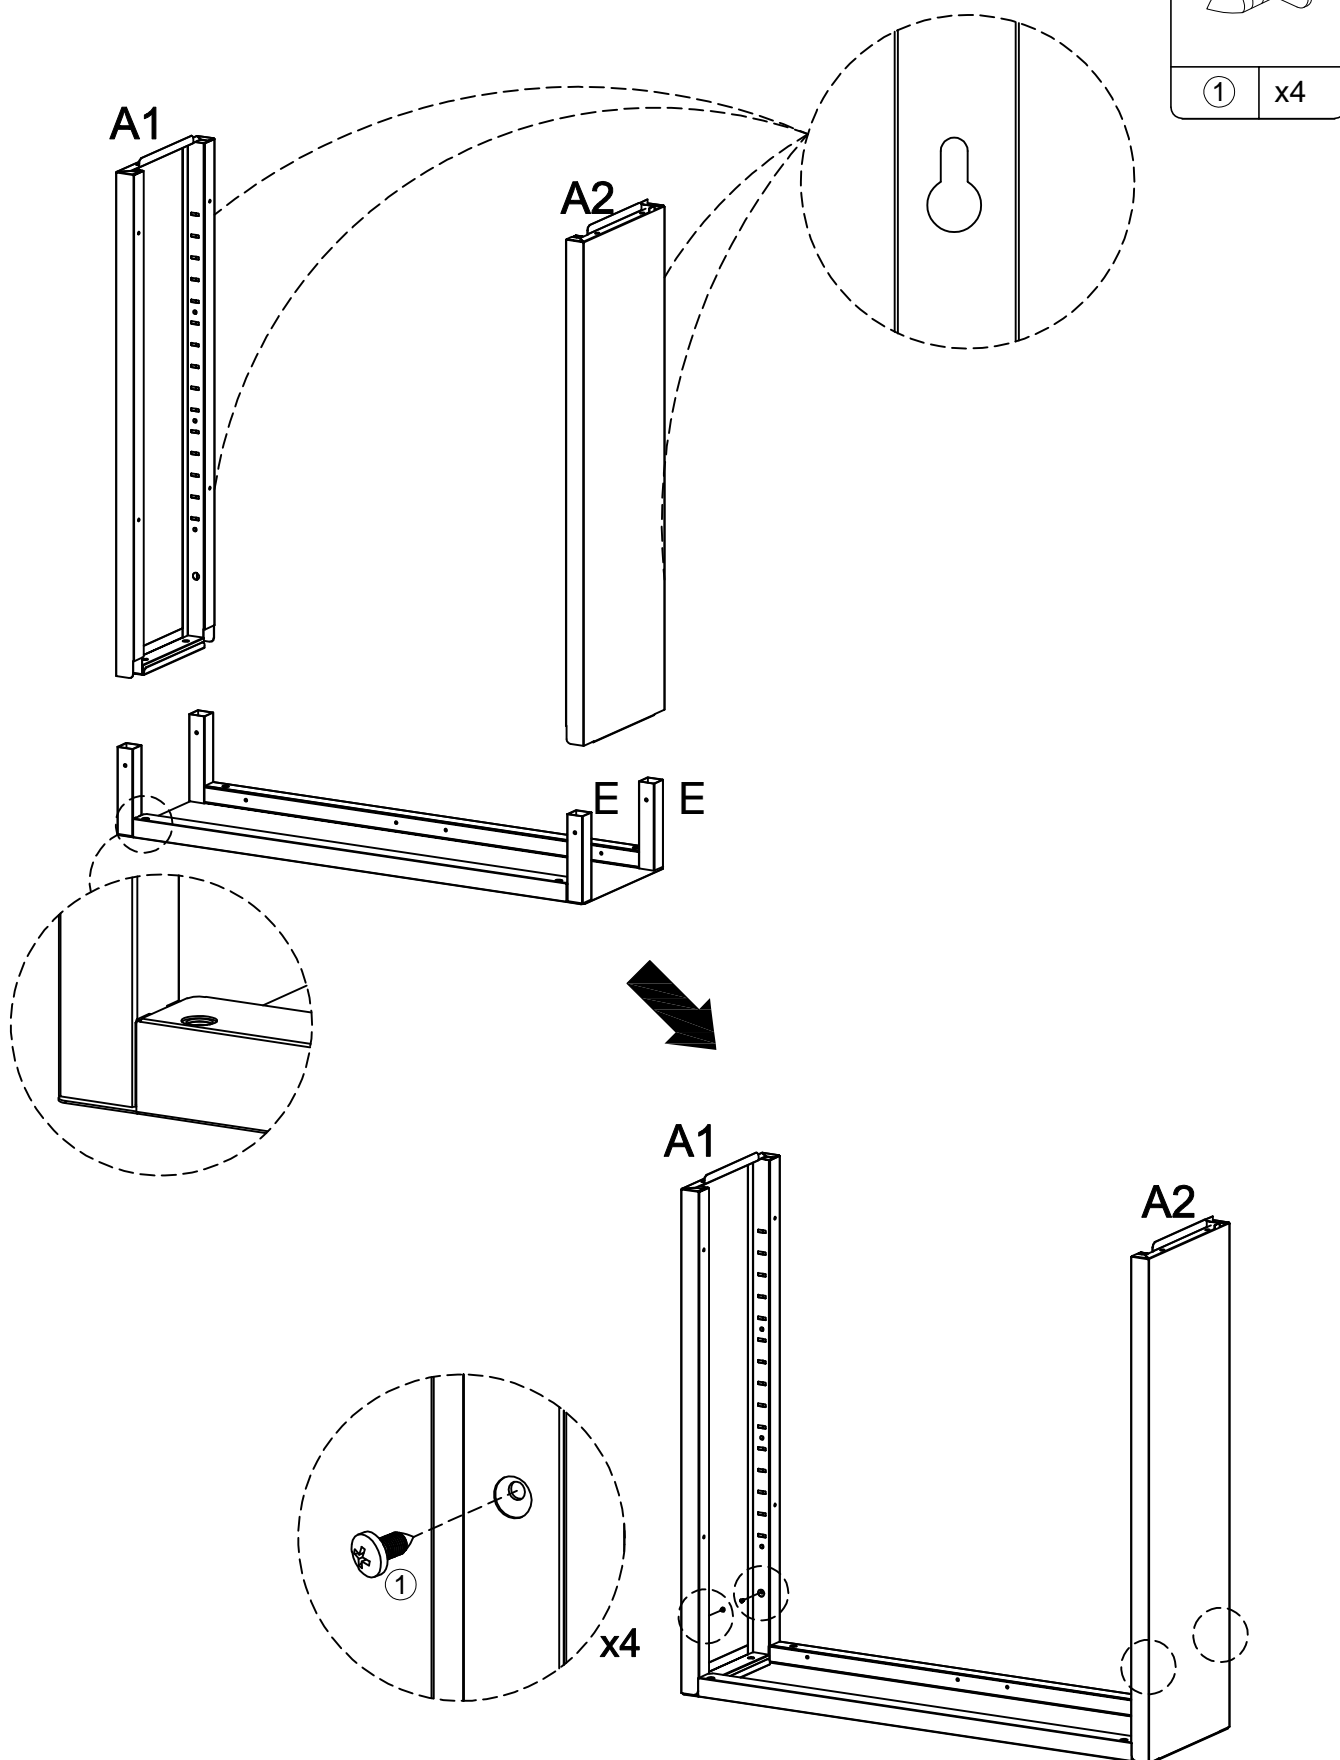


(3) - Attach (B1) & (B2) to (A1) & (A2) & (E) as below shown.

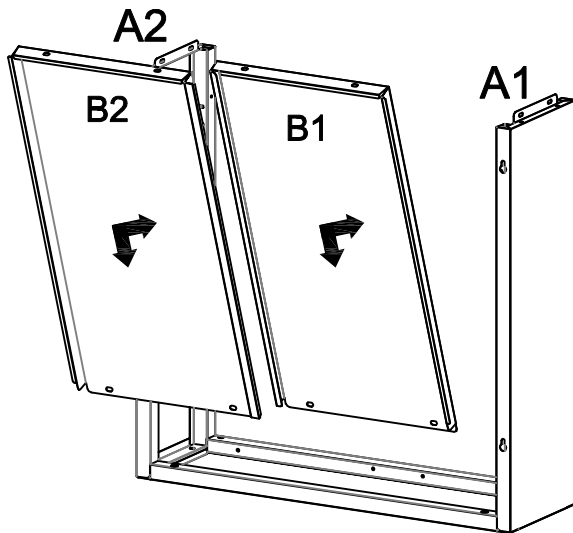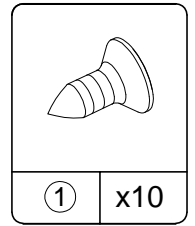





Switch to back view

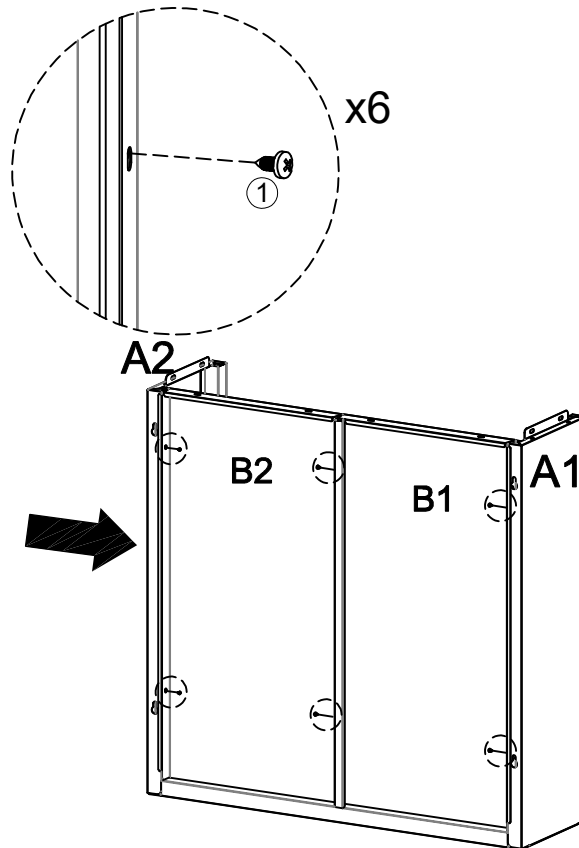



Switch to front view

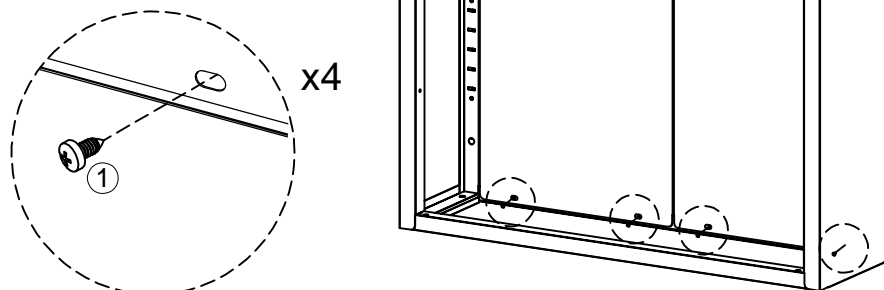

(4) - Attach (D) to (A1) & (A2) & (B1) & (B2) as below shown.

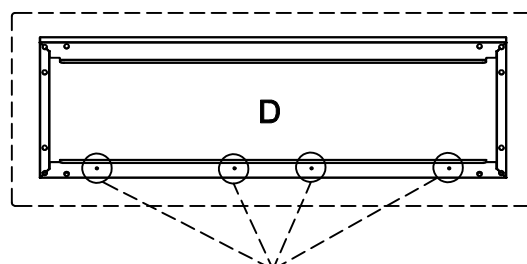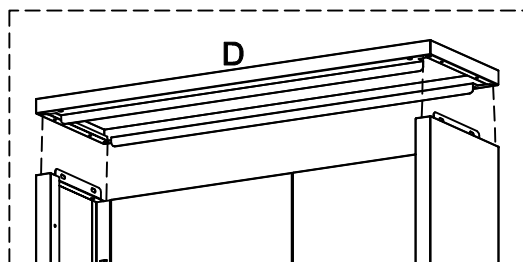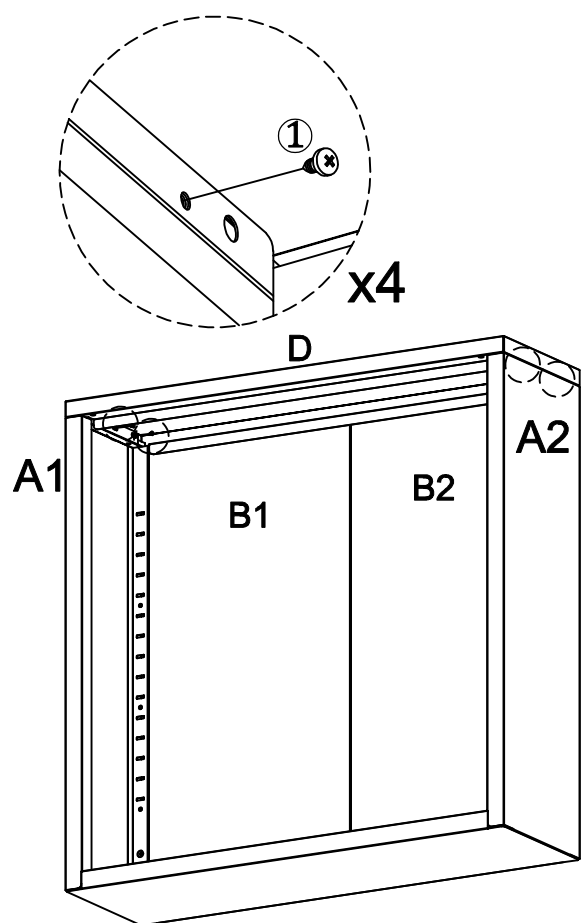
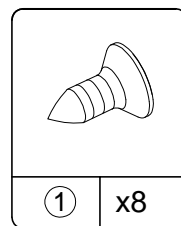


⚠ The back side of (D) with these 4 screw holes

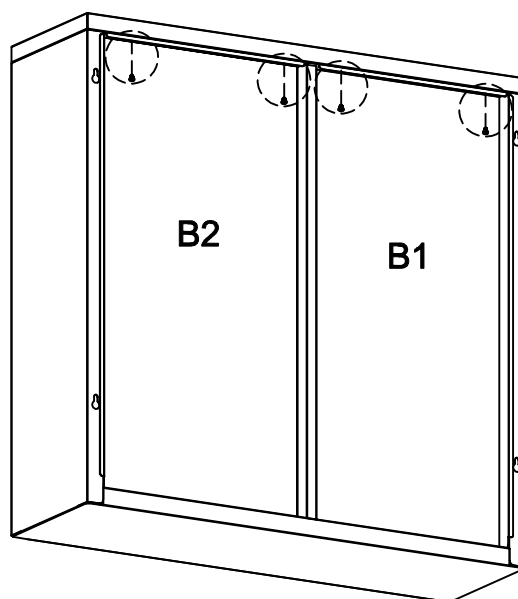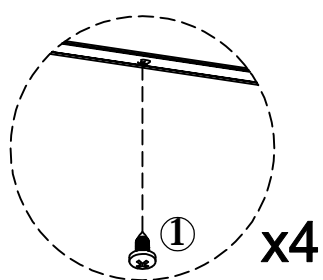


(5) - Attach (A1) & (A2) to wall as below shown.


Align the template in the intended position on the wall and hold it in place using tape.

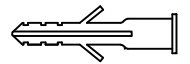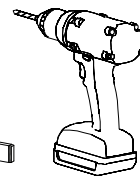





x4

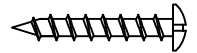

x4


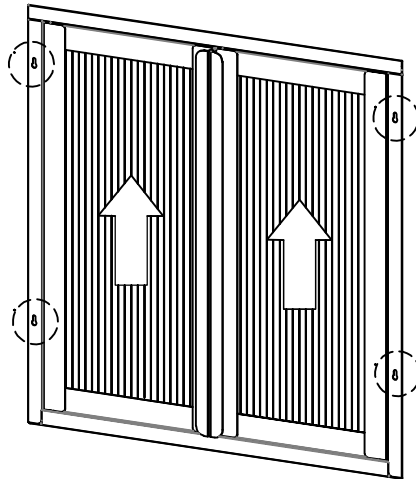


Use a level to ensure it is straight

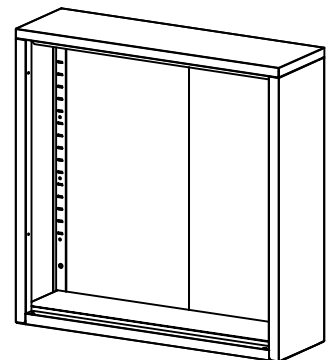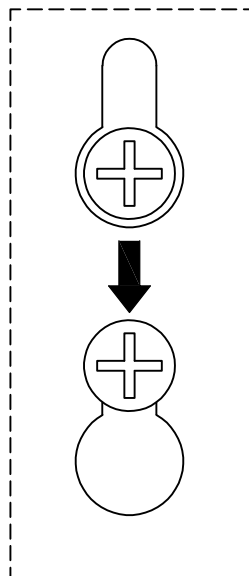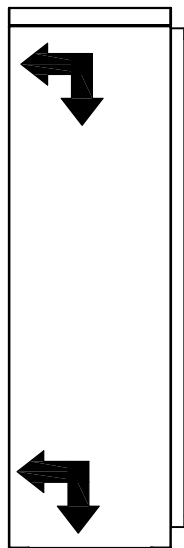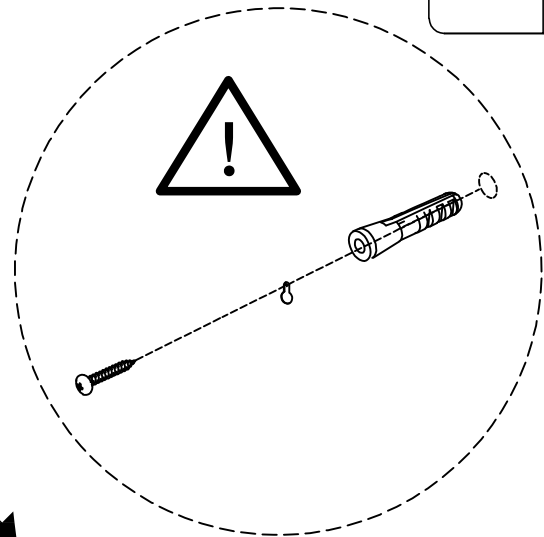

Fix the cabinet securely to the wall. Screws and plugs are not included - use fittings suitable for your wall type. If unsure, ask a professional.

(6) - Attach (G) to pre-assembled unit as below shown.

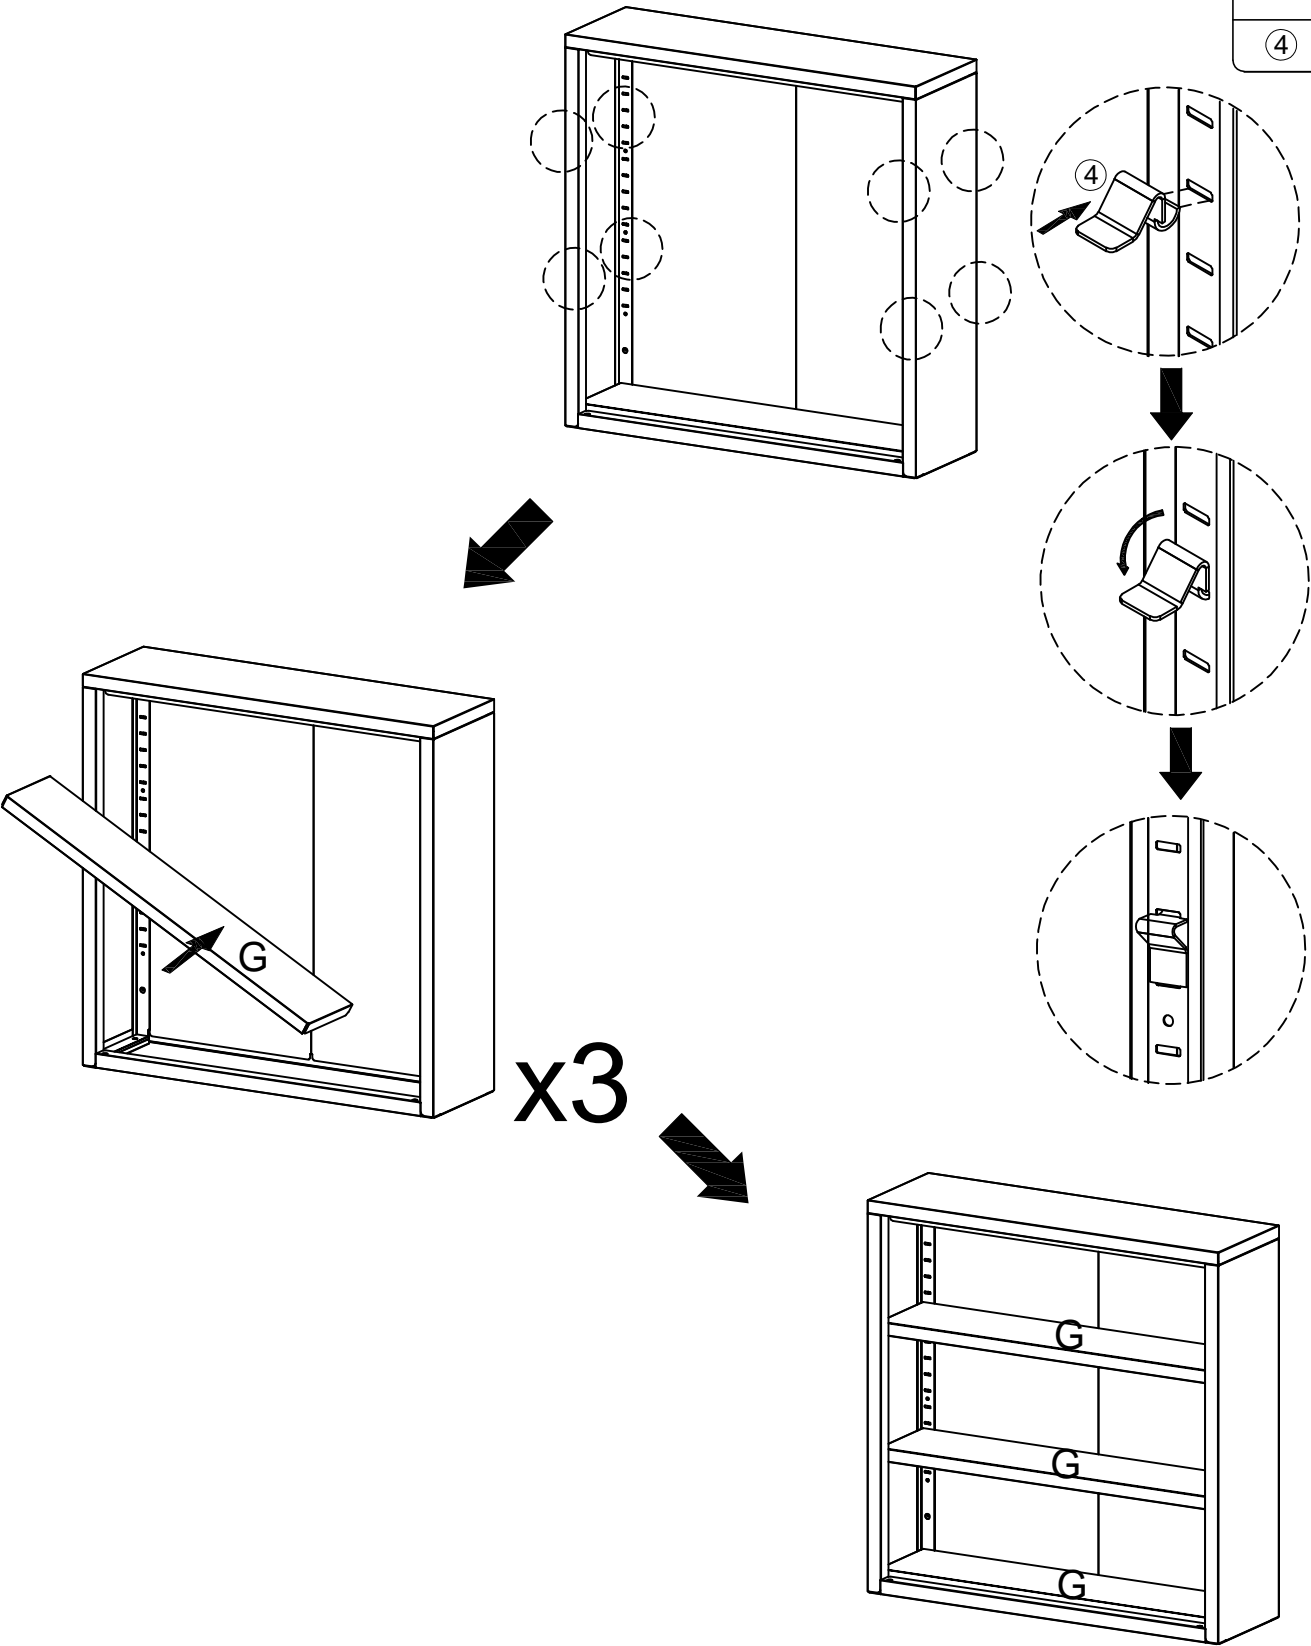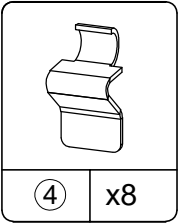

(7) - Attach (C1) & (C2) to pre-assembled unit
as below shown.

